

Alpha Omega® Elite 65 4358-6199 (10.11.12)
Deluxe 3-in-1 65
All Terrain 65



rear-facing child restraint 2.3-18 kg (5-40 lb)
48-91 cm (19-36 in.)
forward-facing child restraint 10-30 kg (22-65 lb)
74-132 cm (29-52 in.)
booster seat 18-45 kg (40-100 lb) 102-132 cm (40-52 in)

Lisez toutes les instructions
ensemble de retenue
CONSERVEZ LE
POUR RÉFÉRENCE
À défaut de lire, comprendre
instructions et les avoir
d'instructions et les mi
votre enfant pourrait su
voire mortelles.



Read all instructions BEFORE USING
this child restraint and booster seat.
KEEP INSTRUCTIONS FOR FUTURE USE.

Alpha Om
De Luxe 3-
Tout-Terr
Ensemble de retenue
orienté vers l'arrière
2.3-18 kg (5-40 lb) 48
ensemble de retenue
orienté vers l'avant
10-30 kg (22-65 lb) 74
siège d'appoint 18-45

⚠ WARNING:
Failure to read, understand and follow the
instructions and warnings in this instruction manual
and the warnings on the system could result in
serious injury or death to the child.

⚠ WARNING:

Failure to read, understand and follow the instructions and warnings in this instruction manual and the warnings on the system could result in serious injury or death to the child.

B-1 Vehicle Seating Position



- ▲ Never install a rear-facing child restraint in the front seat of a vehicle equipped with an active passenger side frontal airbag.
- ▲ Always check vehicle owner's manual for child restraint and booster seat use with side airbags.
- ▲ For vehicles with no rear seats, check the vehicle owner's manual for location and installation of a child restraint and booster seat.

B-2 Installation in Vehicle

- ▲ Check the vehicle belt or UAS belt before each use. Use only if the belt is tightened properly and securely.
- ▲ When unoccupied the rear-facing child restraint must be firmly secured to the vehicle with a lower universal anchorage system if available or with a vehicle seat belt. The tether strap must be stored as described in the instruction manual.
- ▲ When unoccupied, the forward-facing child restraint must be firmly secured to the vehicle with a lower universal anchorage system if available or with a vehicle seat belt and the tether strap.

B. Safety Information

- ▲ When unoccupied, the booster seat must be firmly secured to the vehicle with the vehicle's seat belt only. The lower universal anchorage system and tether strap must be stored as described in the instruction manual.
- ▲ In a crash or sudden stop, an unsecured child restraint or booster seat could injure the driver or other occupants in the vehicle.
- ▲ Always check vehicle owner's manual for proper use of vehicle seat belts and the universal anchorage system (UAS) with your child restraint.
- ▲ In very few vehicles, the child restraint and booster seat cannot be properly installed because of the type of seat belt system, airbag system and/or lack of location to anchor the tether strap. Always read and follow the vehicle owner's manual instructions for child restraint use.

B-3 Child Restraint and Booster Seat Use

- ▲ Do not use a child restraint or booster seat that has been in a crash or a collision. The system must be replaced.
- ▲ Do not use a child restraint or booster seat if you do not know the history of the restraint.
- ▲ Never take your child out of the child restraint or booster seat or attend to the child's needs while the vehicle is moving.
- ▲ Never leave child unattended in the child restraint or booster seat.

C-1 Choose Position for Your Child


Your child's height, weight and age determine how your child restraint or booster seat should be placed in the vehicle and which restraint should be used.

2.3-18 kg (5-40 lb.) 48-91 cm (19-36 in.)

Rear-Facing using 5-point harness

Infant and infant restraint are placed in the back seat and face the rear of the vehicle.

NOTE: Infants **MUST** be rear-facing until they are at least 1 year of age, weigh 10 kg (22 lbs) AND are able to walk unassisted.

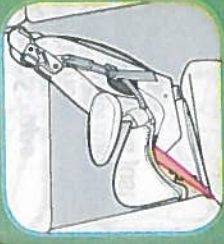

10-30 kg (22-65 lb.) 74-132 cm (29-52 in.) Over 1 Year Old

Forward-Facing using 5-point harness

Child and child restraint are placed in the back seat and face the front of the vehicle.

NOTE: Children **must** be 1 year old or older for forward-facing position.



18-45 kg (40-100 lb.) 102-132 cm (40-52 in.)

Booster Seat using vehicle lap/shoulder belt combination

Child and booster seat are placed in the back seat, facing the front of the vehicle.

5-point harness is removed.



Verify your child's weight and height (do not guess) before choosing the child restraint's position.

▲ To avoid the child being seriously burned, always check for hot seat and buckles before using this child restraint.

▲ Do not use a child restraint or booster seat with missing or damaged parts.

▲ Do not lubricate the buckles, harness system or fasteners for any reason.

▲ DJG does not recommend the use of accessories or add-ons that have not been certified with this child restraint and booster seat at original purchase date.

▲ Never allow any child to play with this child restraint and booster seat. It is not a toy.

▲ Do not remove the warning labels.

▲ This child restraint has been certified for use in passenger vehicles and aircraft. This booster seat has been certified for use in passenger vehicles only. Do not use in a boat, on a motorcycle or in a cargo van or bus where there are no seat belts or tether anchors. Do not modify for use as a crib or a swing. Do not leave on stove top or any other hot surface.

▲ Read all instructions and warning labels for additional warnings.

B-4 Transport Canada Regulations

Transport Canada Road Safety Directorate regulates children's restraint systems under the Motor Vehicle Restraint Systems Safety Regulations (RSCR). The regulations require the manufacturer and/or importer to certify the child restraint to the applicable safety standards and place specified warnings and information on the labels fastened to each child restraint and in this instruction manual.

E. Aircraft Installation

This child restraint is certified for aircraft use only when used with the internal harness. Use only on forward-facing seats and in a position where the seat belt can be tightened securely. The installation is the same as in your vehicle. Use only with F.A.A. certified equipment. Contact the airline before taking the child restraint on an aircraft in order to comply with their regulations.



⚠ WARNING:

Secure UAS belts and tether strap when using the aircraft belts.

NOTE: Install the child restraint in a window seat to avoid blocking the aisle. If the aircraft lap belt is too short, ask the flight attendant for a belt extender.



Rear-Facing Aircraft Installation

For rear-facing installation, follow section F-4 Install Rear-Facing with Vehicle Belts.



Forward-Facing Aircraft Installation

For forward-facing installation follow section G-5 Install Forward Facing with Vehicle Belts.




This booster seat is NOT certified for use in aircraft when used as a booster seat, because aircraft seats do not have shoulder belts.

F. Prepare to Install Rear-Facing


F-1 Prepare to Install Rear-Facing
2.3-18 kg (5-40 lb.), 48-91 cm (19-36 in.)
Rear-Facing using 5-point harness



UAS Belt

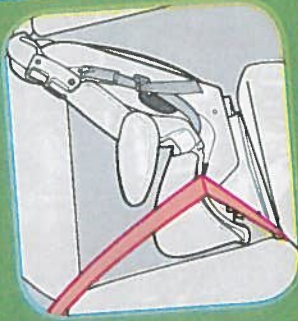

Lap/Shoulder Belt

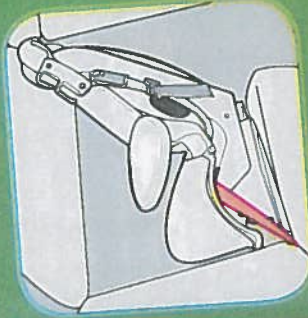

Lap Belt



⚠ WARNING:

Never install a rear-facing child restraint in the front seat of a vehicle equipped with an active passenger side frontal airbag.



This child restraint must always face the rear of the vehicle and be in the fully reclined position until the child is at least 1 year old, weighs 10 kg (22 lbs) AND is able to walk unassisted.



F-4 Install Rear-Facing with Vehicle Belts

Review section D-4 to determine what kind of vehicle belts you have. Review your vehicle's owner manual for seat belt use.

WARNING:



Do not use the UAS along with the vehicle lap or lap/shoulder belt. Secure UAS belts when using the vehicle belts.

Check the vehicle belt before each use. Use only if the belt is tightened properly and securely.



Secure the tether hook to the tether attachment when used rear-facing.

Fully recline the child restraint and rotate the child restraint to the correct recline angle that matches the weight of your child. Do not use any other recline positions rear facing. Do not rotate the child restraint beyond the bottom or top level to ground lines.

Failure to follow these warnings can result in serious injury or death.



1. Pull Pad Off Corners of Child Restraint

Pull the seat pad off the front corners of shell.

F. Install Rear-Facing with Vehicle Belts

2. Place Child Restraint in Vehicle Rear-Facing in the Back Seat

Fully recline the child restraint. To recline, see section C-6.



3. Rotate Child Restraint to Correct Recline Angle

For children between 2.3-10 kg (5-22 lb), the bottom level to ground line must be level with the ground.

For children between

10-18 kg (22-40 lbs) and are able to sit up

unassisted, rotate the child restraint between the top and bottom level to ground lines.



NOTE: Only if needed, you may use a rolled towel(s) or foam noodle(s) under the front of the child restraint where the vehicle's seat back meets the vehicle's bench seat to get the correct recline angle.

4. Thread Vehicle Belt

Thread the vehicle lap or lap/shoulder belt through the rear-facing belt path.

With an ALR belt, pull the belt all the way out before threading.



With a switchable retractor, pull the shoulder belt all the way out to switch the retractor into the ALR mode before tightening.

F. Install Rear-Facing with Vehicle Belts

8. Check Vehicle Belt Tightness

Grasp the child restraint at the belt path with one hand. Push and pull the child restraint from side to side, forward and back. The child restraint should not move more than 2.5 cm (1 in.) and the vehicle belt should not loosen.

NOTE: If it moves more than 2.5 cm (1 in.) or if the vehicle belt loosens, try reinstalling the child restraint or try another seating location.



9. Secure Child in the Child Restraint



10. Recheck Recline Angle

Make sure the child restraint is properly reclined according to your child's weight. Repeat steps 1 through 9 if it is not reclined properly.




5. Pull Vehicle Latch Plate Across to Opposite Side

Reach under pad and pull the vehicle belt across the shell and out the rear-facing belt path on opposite side. Buckle vehicle belt. Vehicle belt **MUST** be under pad and in front of buckle strap.

Do not place vehicle belt over child's legs.

NOTE: You must use the 1st or 2nd buckle strap slots when rear-facing.

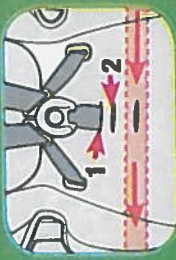

6. Replace Pad Over Corners

Make sure the vehicle belt is not twisted.



7. Tighten Vehicle Belt

Push down firmly on the child restraint and pull on the vehicle shoulder belt or lap belt to tighten.

With a switchable retractor, feed the shoulder belt back into the retractor while tightening.

It may be easier to tighten the belt through the belt path opening as shown.




G-1 Preparing to Install Forward-Facing


10-30 kg (22-65 lb.) 74-132 cm (29-52 in.) and over 1 year old. Forward-Facing using 5-point harness



UAS Belt

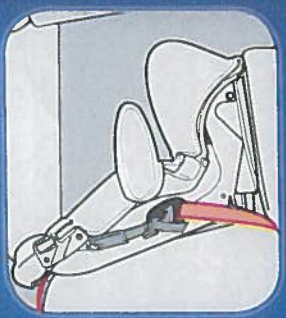

Lap Belt

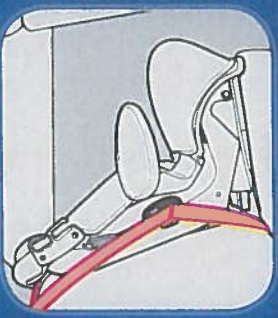

Lap/Shoulder Belt

⚠ WARNING:

Never place a child less than one year old or weighing less than 10 kg (22 lbs) forward-facing.

Safety Tip:

Experts agree that children should remain rear-facing as long as possible. In this child restraint, your child can remain rear-facing up




G-2 Adjusting the Tether Strap

The tether strap is used for the forward-facing position only. Vehicles manufactured today already have the tether anchor hardware installed in the vehicle. Refer to your owner's manual for locations. If your vehicle does not have a tether anchor bracket, please see your dealer or a qualified mechanic and have one installed.

⚠ WARNING:

Tether straps are required in Canada. Using this child restraint without the tether strap anchored as recommended by the manufacturer would be a misuse of the child restraint and, in a sudden stop or crash, could cause serious injury or death.

To Adjust Tether Strap:

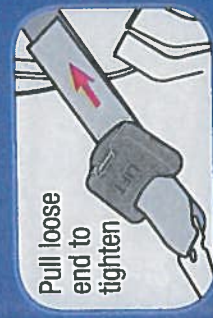

Pull loose end to tighten

To tighten: After the child restraint is locked into place with UAS or vehicle belt, put knee in child restraint, push down on the child restraint and attach the tether hook to the vehicle's anchor bracket. Pull on free end of the tether strap.



Lift up to loosen

To loosen: Lift up on tether adjuster and push lock toward the tether hook.

G. Adjusting the Tether Strap



G-5 Install Forward-Facing With Vehicle Belts



NOTE: Review the section D-4 to determine what kind of vehicle belts you have. Review your vehicle's owner manual for vehicle seat belt use.

⚠ WARNING:



Do not use the UAS along with the vehicle lap or lap/shoulder belt. Secure UAS belts when using the vehicle belts.

Check the vehicle belt before each use. Use only if the belt is tightened properly and securely.

Do not use any recline position except to install the child restraint flush against the vehicle seat back. Vehicle seat back must be upright.

Failure to follow these warnings can result in serious injury or death.



1. Place Child Restraint in Vehicle Forward-Facing Flush Against Back Seat

Do not use any recline positions except to make the child restraint flush against the vehicle seat back.

NOTE: Do not use the level-to-ground lines on the side of the child restraint in the forward-facing position.

Installation Tip:

Loosely attach the tether hook before threading the vehicle belt. Consult vehicle's owner manual for specific location.



G. Install Forward-Facing with Vehicle Belts

2. Thread Vehicle Belt



Thread the vehicle lap or lap/shoulder belt through the forward-facing belt path and out the other side.

With an ALR vehicle belt, pull the vehicle belt all the way out before threading the child restraint.

With a switchable retractor, pull the shoulder belt all the way out to switch the retractor into the ALR mode before tightening.

Buckle vehicle belt.

3. Tighten Vehicle Belt




Place knee in the child restraint. Push down firmly while pulling up on the vehicle shoulder belt or lap belt to tighten.

With a switchable retractor, feed the shoulder belt back into the retractor while tightening.

It may be easier to tighten the vehicle belt through the belt path opening as shown.



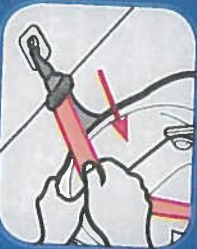

4. Tighten the Tether Strap
With knee still in child restraint, push down on the child restraint again and pull on free end of the tether strap to tighten.



5. Check Vehicle Belt Tightness
Grasp the child restraint at the belt path with one hand. Push and pull the child restraint from side to side, forward and back. The child restraint should not move more than 2.5 cm (1 in) and the vehicle belt should not loosen. **NOTE:** If it moves more than 2.5 cm (1 in.) or if the vehicle belt loosens, try reinstalling the child restraint or try another seating location.



6. Secure Child in the Child Restraint



H-1 Prepare to Install Booster Seat

18-45 kg (40-100 lb) 102-132 cm (40-52 in.)
Booster seat using only vehicle lap/shoulder belt.



You **MUST** remove the harness system (see section C-7).

You **MUST** remove lumbar supports and body pillows to use this seat as a booster seat (see section C-5).



Lap/Shoulder Belt

WARNING:

Use only the vehicle's lap and shoulder belt system when restraining the child in this booster seat.



Do not use the UAS belts or the tether strap when using as a booster seat.

Secure both UAS and tether strap.

Do not use the harness system when using as a booster seat.



Do not use this booster seat if the midpoint of your child's ears are above the top of the booster seat's headrest.

Failure to follow these warnings can result in serious injury or death.

H. Prepare to Install Booster Seat

H-2 Install Using the Lap and Shoulder Belts



NOTE: Do not use the level to ground lines on the sides of the shell. **DO NOT** use a locking clip when using this seat as a booster seat.

1. Place Booster Seat in Vehicle Forward-Facing Flush Against Back Seat

Do not use any recline position except to make the booster seat flush against the vehicle seat back. Vehicle seat back must be upright.



2. Place Child in Seat

Place the child's bottom and back flat against the booster seat. This will allow the vehicle belt to be properly tightened.

Adjust the headrest so that the midpoint of the child's ears are at the midpoint of the headrest.



3. Buckle Lap and Shoulder Belt

Lap belt should cross the child's thighs (not on the stomach). The shoulder belt should lay snugly across the center of the child's shoulders and across the chest

(not on the face or neck). Both belts should be under the



4. Position Shoulder Belt

To help position the shoulder belt, you may need to secure the shoulder belt in one of the two shoulder belt-positioning guides or in the adjustable shoulder belt position guide, depending on your model.

To adjust the adjustable shoulder belt-positioning guide, pull out on the red end and slide up or down the track. Release at desired position. Make sure it locks into place.

NOTE: Use the shoulder belt-positioning guide only if necessary to correctly position the shoulder belt on the child.

Check periodically to ensure your child has not moved out of position and loosened the shoulder belt.



H. Install Using the Lap and Shoulder Belts

WARNING:

Do not use the vehicle lap belt only when using this seat as a booster seat.

The shoulder belt must always be adjusted snugly across the child's chest.

NEVER place the shoulder belt behind the child's arms.

Failure to follow these warnings can result in serious injury or death to your child.





H-2 Install Using the Lap and Shoulder Belts

NOTE: Do not use the level to ground lines on the sides of the shell. **DO NOT** use a locking clip when using this seat as a booster seat.



1. Place Booster Seat in Vehicle Forward-Facing Flush Against Back Seat

Do not use any recline position except to make the booster seat flush against the vehicle seat back. Vehicle seat back must be upright.



2. Place Child in Seat

Place the child's bottom and back flat against the booster seat. This will allow the vehicle belt to be properly tightened.

Adjust the headrest so that the midpoint of the child's ears are at the midpoint of the headrest.



3. Buckle Lap and Shoulder Belt

Lap belt should cross the child's thighs (not on the stomach). The shoulder belt should lay snugly across the center of the child's shoulders and across the chest (not on the face or neck). Both belts should be under the armrest as shown. Pull up on the shoulder belt to tighten.

55



4. Position Shoulder Belt

To help position the shoulder belt, you may need to secure the shoulder belt in one of the two shoulder belt-positioning guides or in the adjustable shoulder belt position guide, depending on your model.



To adjust the adjustable shoulder belt-positioning guide, pull out on the red end and slide up or down the track. Release at desired position. Make sure it locks into place.

NOTE: Use the shoulder belt-positioning guide only if necessary to correctly position the shoulder belt on the child.

Check periodically to ensure your child has not moved out of position and loosened the shoulder belt.

H. Install Using the Lap and Shoulder Belts

⚠ WARNING:

Do not use the vehicle lap belt only when using this seat as a booster seat.

The shoulder belt must always be adjusted snugly across the child's chest.

NEVER place the shoulder belt behind the child's back or under the child's arms.

Failure to follow these warnings can result in serious injury or death to your child.



56